


Parts Index

* Not to scale

Patented
rammount.com/ip

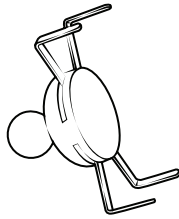

A
X-Grip® Body



B
Tether (Optional)




C
(x4) Rubber Caps




D
Glue



- 1 Apply **(D) Glue** to **(C) Rubber Caps**, then insert onto each metal arm of **(A) X-Grip® Body**. Allow glue to dry fully before use.

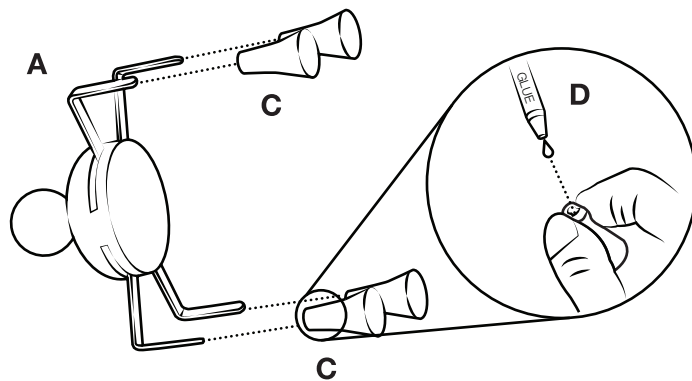

- 2 To insert device, gently pinch together either the left or right side of arms of the **(A) X-Grip® Body** to expand the holder, then insert the device, and gently release the arms to secure the holder around the device.

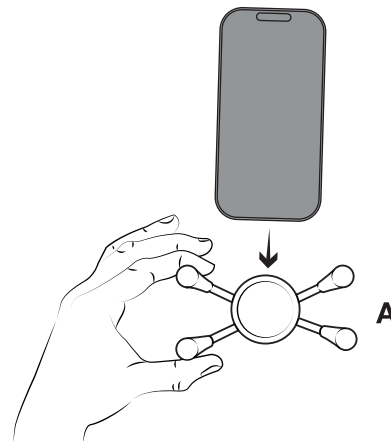

- 3 To remove the device, pinch the metal arms together to release tension, then remove.

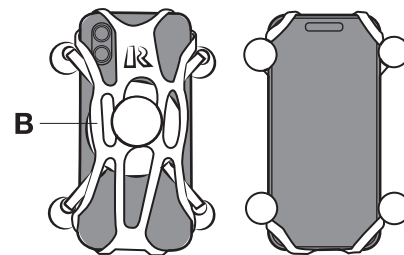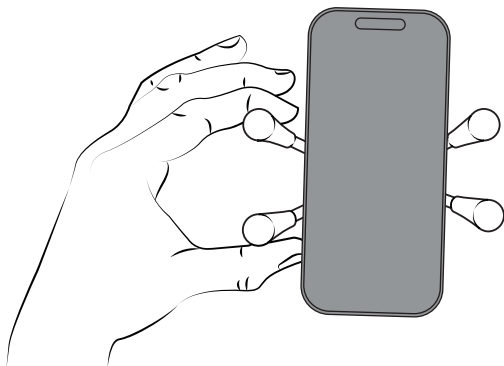

FOR OPEN COCKPIT ENVIRONMENTS

Install the **(B) Tether** by stretching the center holder over the ball adapter, then wrap each corner around your device after inserting the device into the holder.

RMR-INS-B-UN7



Safety Precaution

Do not install this product near or over an airbag deployment area or in a location that obstructs the driver's vision or interferes with vehicle operation. National Products, Inc does not assume responsibility or liability for any such personal injury, death or property damage.